1

D.c

Hercular™ -dead bolt

Installation instruction

Position installation template at proper height on the door. Mark center for 21/8" (54 mm) diameter hole at correct backset.

Mark center of door thicknes for bolt hole.

2

Drill a 2¹/s"(54 mm) through hole on door side.

Drill a 1"(25 mm) hole for front plate bolt or a $1^{1}/8$ "(28 mm) for a drive in bolt ,to a depth of $3^{3}/4$ " (95 mm).

Recess for bolt face if necessary.

3

Strike type-Install bolt as shown in diagram.


Fasten with screws.


4


Drive in type-install bolt as shown in diagram


Tap into place with hammer until flash with door.

Note! Don't throb on bolt use a piece of wood as a buffer.

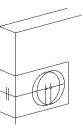

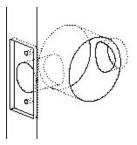

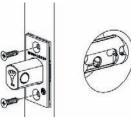


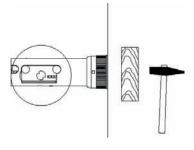




Hercular™ -dead bolt

Installation instruction

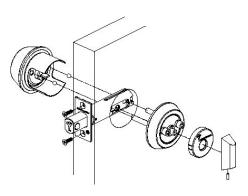

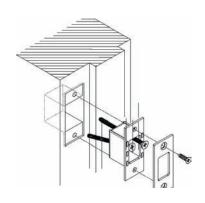

Tumbturn type Shorten the tail piece on cylinder side according to door thickness.

Remove thumbturn and cover plate on thumbturn side.

Place steel balls inside mounting screws holes.

Insert exterior cylinder Insert cylinder thumbturn unit into position in a vertical or horizontal position (according to customer requirements). Tighten mounting screws.

Check operation.

Install cover plate and tumbturn.

Double cylinder Shorten the tail piece on both side according to door thickness.

Remove cover plate on inner side. Place steel balls inside mounting screws holes.

Insert cylinders into position. Tighten mounting screws.

Check operation.

Install cover plate back in place.

Mark frame opposite to center of bolt.

Drill and recess as necessary for strike plate and box.

Drill 1/8 (3 mm) pilot holes for long screws Install box and strike as shown in diagram



Hercular™ -dead bolt

Changing backset

Lald the helt in l

Hold the bolt in lock position. Press pin (*) into the bolt housing.

2


Take out the mechanism through the bolt housing.

3


Change arm position into the other socket at the edge of the bolt.

4


Insert the mechanism back into the housing till the pin pops out from the first bore

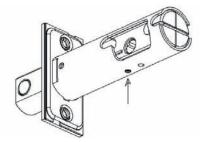


2

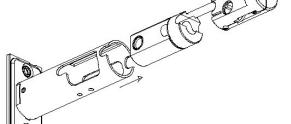

3

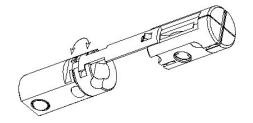


1

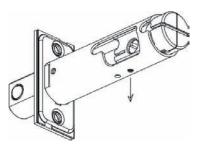




- Press the pin into the bolt housing. Step 3 Step 4

Step 2

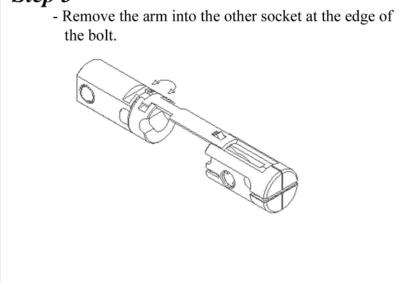

- Hold the bolt in the locked position (Bolt extended)..

Step 1

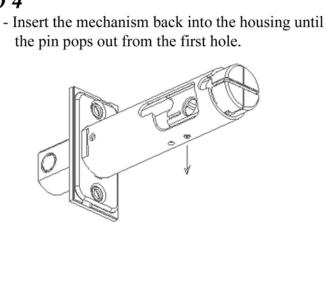

- Remove the mechanism from the bolt housing.